

sabichi.

STEAM IRON


CODE: 87188



sabichi homewares ltd
UB6 7JD
www.sabichi.co.uk
Tel: +44 (0)208 799 7474
Email: sales@sabichi.co.uk

INSTRUCTIONS

Component

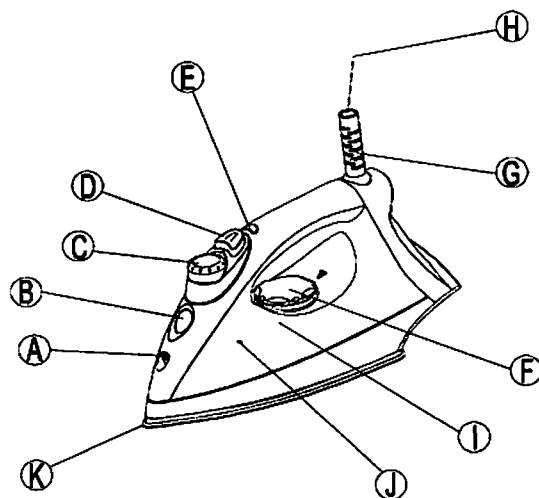

- A. Spray nozzle B. Water inlet C. Variable steam control
D. Spray button E. Temperature indicator light
F. Temperature dial G. Swivel cord outlet H. Cord
I. Water reservoir J. Maximum filling level K. Soleplate


Important Safety Instructions

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1. Before first use check your outlet voltage corresponds to the voltage stated on the rating label of the iron.
2. The iron must not be left unattended, while it is connected to the electricity supply.
3. The plug should be removed from the socket, before filling the water reservoir, cleaning or when not in use.
4. If the supply cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
5. Burns can occur from touching hot metal parts, hot water or steam. Use with caution when you turn a steam iron upside down as there may still be hot water in the reservoir.
6. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.

of vinegar

- and water.
- According to waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated.
- If at any time in future you need to dispose of this product, please do NOT do so with household waste.
- Please send this product to WEEE collecting points where available.

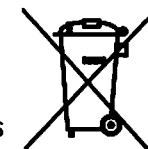

After Sales Service

This product is guaranteed for twelve months from the date of original purchase. Proof of purchase will be required.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, unit parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without prior notice.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not affect your statutory or legal rights.

Temperature is high or low	The temperature dial is not in the correct position	Set the temperature dial to the correct position.
Releasing water	Steam button is not off.	Change the steam button to off position.
No steam	Temperature dial is not in the correct position	Set the temperature dial to the steam area.
	The steam button is not in the steam position.	Set the steam button to steam position.
	There is no water in water reservoir	Fill with water.
Water drips from the soleplate	The temperature dial is not in the steam area.	Set the steam button to steam position.
	The iron is not hot enough.	Wait until the pilot light goes off before ironing.
	Water is over the "Max" position.	Pour out some water
Little steam	Not enough water.	Fill water to correct level.
	Something is blocked in the water tank or soleplate holes.	Clean them (set the temperature dial to max temperature, set steam button to steam position.)
No spraying	Air in the water pump	Stop up the spray nozzle, then press spray button several times.
	No water or water not enough	Fill with water.

Care & Cleaning

- Clean the iron with a clean damp cloth.
- Always remove the mains lead before cleaning.
- Do not use any abrasive cleaning agents.
- To clean the iron and remove deposits of starch and humid substances, rub it with a piece of cloth soaked in a mixture

7. The iron should always be turned to 0 before plugging or unplugging from the outlet. Never yank cord to disconnect from outlet, instead grasp plug and pull to disconnect.
8. Ensure the ironing board is stable before placing the iron on it.
9. To protect against injury never iron or steam fabrics whilst they are being worn against the body.
10. Take care to avoid contact with the base plate when the iron is hot.
11. To protect the cord do not wind it tightly when stored and avoid the cord rubbing on the edges of the iron rest in use.

Operation Guide

1. Some parts of the iron have been slightly greased. When the iron is used for the first time, you may notice a slight emission of smoke and hear some sounds made by expanding plastics. This is quite normal and it stops after a short time.
2. Remove any stickers, protective foil or storage cover from the soleplate.
3. Textile which has been applied (gloss, crinkle, relief etc.) is best ironed at lower temperature.
4. Sort the laundry to be ironed according to the international symbols on the garment label, or if it is missing according to the type of fabric.
5. Temperature guide

Follow the ironing instructions on the garment label. If there are no instructions but you know the type of fabric, please consult the table.

Warning: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabric.

Fabric	Temperature control	Ironing methods
Synthetic nylon	.	Iron the reverse side. Do not use the spray function, as spraying could cause stains.
Silk wool	..	Iron the reverse side to prevent shiny spots.
Cotton linen	...	Set to steam position.

Filling the reservoir

1. Ensure the steam button is off, and the plug is disconnected from the socket.
2. Raise the tip of the iron to help the water enter the opening without overflowing.
3. When you finishing ironing, empty the water reservoir.
4. You can use normal tap water. However if the water in your area is very hard, it is advisable to use distilled water.

Steam ironing

1. Fill with water according to instructions, and stand the iron on its end.
2. Insert plug into the mains (ensure the correct voltage is used).
3. Move the steam selector to a position between minimum and maximum depending on the quantity of steam required and the temperature.
4. When the iron is heated up the temperature indicator will be lit.
5. Set the steam button to Steam spray a couple of times and begin ironing.

Spraying

Laundry can be moistened at any temperature using the spray button twice. Before spraying ensure that there is enough water in the reservoir. Press the spray button slowly for a dense spray or quickly for a vaporized spray.

Warning for delicate fabrics we recommend spray function, or putting a damp cloth between the iron and the fabric. To avoid staining do not use the spray on silk or synthetic fabrics.

Dry ironing

1. To iron without steam, follow the instructions in section steam ironing leaving the steam position on 0.
2. Insert the mains plug into the wall socket.
3. Set the temperature dial to the correct temperature for your fabric.
4. Wait until the temperature control light goes off, then you can begin ironing.

After Ironing

1. Disconnect the plug of the iron from the socket, empty the reservoir by turning the iron upside down and gently shaking it.
2. Leave the iron to cool down completely in a vertical position and always store the iron in safe dry place.

Technical Information

Type: multifunctional steam iron (stainless steel soleplate)

Input power: 1200W

Working voltage: 230V

Suitable for: synthetic fibers, rayon, silk, wool, cotton, linen

Trouble Shooting Guide

Problem	Possible causes	Solution
The soleplate is cold	Connection problem	Check the plug and mains.
	The temperature dial is in the wrong position.	Set the temperature dial to the correct temperature for your fabric.