

 


# HADEN

ESTD. ENGLAND 1958



## INSTRUCTION MANUAL

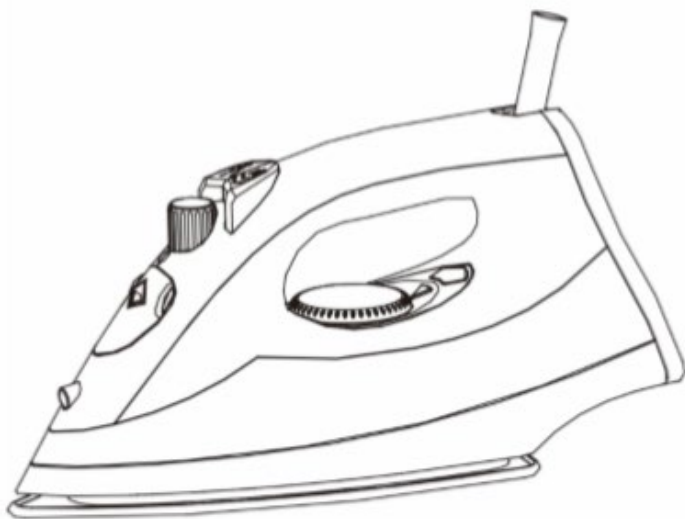

Product Code: 198136

# STEAM IRON



# HADEN

ESTD. ENGLAND 1958

## How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us  
**01909 544 570**



Email us  
**info@hadenappliances.com**



Write to us  
**Team Haden, Sabichi Homewares  
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us  
**www.haden.com**

 
# SAFETY INSTRUCTIONS

When using electrical appliances, the following basic safety precautions should always be taken.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
  - Children should be supervised to ensure that they do not play with the appliance.
  - Cleaning and user maintenance shall not be made by children without supervision.
  - Keep the appliance and its mains cord out of the reach of children younger than 8 when the appliance is switched on or is cooling down.
  - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person.
  - Keep the appliance and its mains cord out of the reach of children when the appliance is switched on or is cooling down.
  - Never use the appliance if it is damaged in any way.
  - Remove the plug from the socket before filling the iron with water or pouring out the remaining water after use. Always use the cup provided to fill with water.
  - Never immerse the iron in water.
  - When you have finished ironing or leave the iron for a short period of time;
    - set the variable steam knob to the position of no steam;
    - stand the iron upright;
    - remove the mains plug from the wall socket.
- Note: the soleplate may become damaged if the iron is stored with the soleplate facing downwards.

- Some parts of the iron have been slightly greased and as a result the iron may smoke slightly when switched on for the first time. After a short time, the smoking will cease.
- Before using for the first time remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
- Do not put vinegar or other descaling agents into the water reservoir.
- Do not use chemically descaled water.
- The cord-set should not be allowed to touch the hot soleplate.
- Do not use the appliance if the plug, cord or the appliance itself shows visible damage or if the appliance has been dropped or is leaking. For electrical safety, any repairs to the appliance must be carried out by a qualified electrical engineer only.
- This is an attended appliance. Never leave the iron unattended when in use.
- Always use and rest the iron on a stable, level, heat resistant surface.
- Burns can occur from touching the hot sole plate, hot water or steam.
- To protect against injury never iron or steam fabrics whilst they are being worn.
- To protect the cord do not wind it tightly when stored and avoid the cord rubbing or touching the hot sole plate in use.
- This appliance is intended for household use only and not for commercial, industrial or outdoor use.
- Never leave the appliance unattended when in use.
- Please ensure the wall outlet in your house is well earthed.

# KNOW YOUR IRON

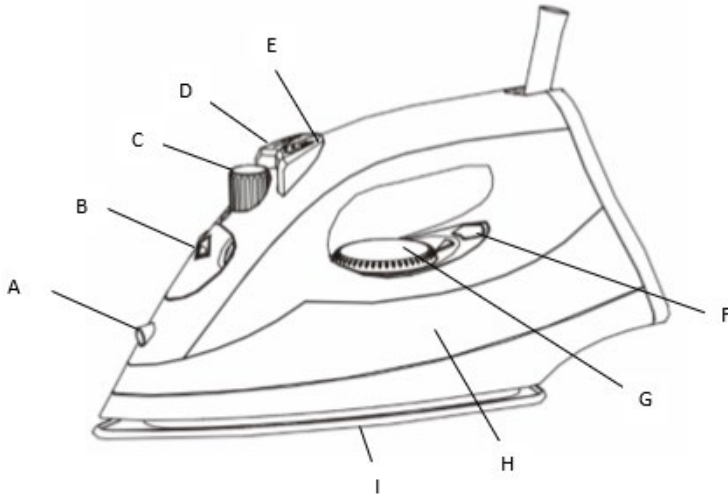

- A. Spray Nozzle
- B. Water Filler Cap
- C. Steam Control Dial
- D. Spray Button
- E. Steam Burst Button

- F. Temperature Indicator
- G. Temperature Dial
- H. Water Tank
- I. Soleplate

# BEFORE USE

Some parts of the iron have been slightly greased. When the iron is used for the first time you may notice a slight emission of smoke and heat some sound made by the expanding plastics. this is quite normal and it stops after a short period of time.

Remove any stickers, protective foil or storage cover from the sole plate.

Textile which has been applied (gloss, crinkle relief etc. is best ironed at lower temperatures and on the reverse.

Sort the laundry to be ironed according to the international symbols on the garment label or if this is missing, according to the fabric type.

## FILLING WITH WATER

Never immerse the iron in water.

1. Make sure the appliance is unplugged.
2. Set the steam control to the "No Steam" position.
3. Tilt the iron backwards.
4. Open the water filler lid.
5. Fill the water tank with tap water. However, if the water in your area is very hard, it's advisable to use distilled water.

Do not fill the water tank beyond the MAX indication.

Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.

6. Close the water filler cap.
7. When your finished ironing, empty the water tank. Do not store the iron with water in the tank.

# HOW TO USE

## SETTING THE TEMPERATURE

1. Place the iron on its heel.
2. Check the laundry care label for the required ironing temperature and then turn the temperature dial to align with the appropriate fabric type on the iron according to the following:

- Synthetics
- Silk, Wool
- Cotton
- MAX Linen

If you do not know what kind of fabric an article is made of, you will need to determine a suitable ironing temperature by ironing a part that will not be visible when worn.

If the fabric contains several kinds of fibres, always select the temperature most applicable. If a garment contains 60% polyester and 40% cotton, you must always choose the material requiring the lowest temperature i.e. Polyester

Silk, woolen and synthetic materials; iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains.

Start ironing garments that require the lowest ironing temperature, such as those made of synthetic fibres.

3. Plug the iron into an earthed wall socket, and the temperature light goes on.
4. When the temperature light goes out, wait a while before you start ironing.

The temperature light will go on and off during ironing, this is normal.

## STEAM IRONING

1. Make sure that there is enough water in the water tank.
2. Select the recommended ironing temperature
3. Plug the iron into the mains
4. Steam ironing is only possible when the temperature setting is set to ●●● or MAX. Otherwise, hot water may escape through the soleplate.
5. After the temperature light has gone out, set the steam control to the appropriate steam position. The iron will start steaming as soon as the set temperature has been reached.
6. Keep the material to be ironed very smooth and avoid running the iron over metal or foreign objects, such as; buttons, zips, etc.
7. When the ironing is finished or during breaks, place the iron in an upright position.
8. Disconnect the iron from the mains supply and pour out any remaining water and leave the iron to cool off.

## IRONING WITHOUT STEAM

1. Set the steam control to “No steam” position
2. Select the recommended ironing temperature

## SPRAYING

You can use the spray function to remove stubborn creases at any temperature.

1. Make sure that there is enough water in the water tank.
2. Press the spray button several times to moisten the article to be ironed



## BURST STEAM

This function provides extra steam to remove very stubborn creases.

1. Set the temperature dial to the MAX position and wait until the temperature light has gone out.
2. Press the Burst of steam button to produce extra steam. Wait a few seconds for the steam to penetrate the material before pressing again. For the best steam quality, do not use more than three successive bursts each time.
3. Excessive use of this feature will cause the iron to cool, wait at least 1 minute before using this function again to prevent water from dripping out of the sole-plate. Always ensure that you consider the temperature setting for the type of fabric being ironed. To prevent water leaking from the soleplate, do not keep the steam control button depressed for more than 5 seconds.

 
## CLEANING

- Before cleaning remove the mains plug from the wall socket and allow the iron to cool down sufficiently.
- Scale and other residue can be wiped off the soleplate with a damp cloth and some non-scratching proprietary cleaner.

## STORAGE

- Before storing remove the mains plug from the wall socket and allow the iron to cool down sufficiently.
- Pour any remaining water out of the water reservoir, taking care to avoid splashing as the water may still hot.
- Set the steam lever to the no steam position.
- Stand the iron upright before storage.

# WASTE ELECTRICAL RECYCLING

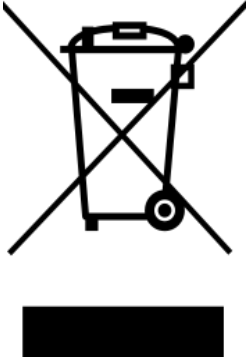

This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste. The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- to recycle waste electrical products using the best available recovery and recycling techniques in order to minimise the
- impact on the environment
- to treat any hazardous substances and
- to avoid increasing landfill.

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where you can drop off your waste product for recycling please contact your local authority.

# Warranty

This product is guaranteed for two years from the date of original purchase. Proof of purchase will be required.

The guarantee is subject to the following provisions:

- Doesn't cover accidental damage, misuse, unit parts, knobs or consumable items.
- The product must be correctly stored and operated in accordance with the instructions contained in this manual.
- Product must be used solely for domestic purposes

The guarantee will be rendered invalid if the product is re-sold or if damaged by an inexperienced repair.

Specifications are subject to change without prior notice. The manufacturer disclaims any liability for incidental or consequential damages.

The guarantee is in addition to, and does not affect your statutory or legal rights

## TECHNICAL DETAILS

<b>Model</b>	Steam Iron
<b>Rated Voltage</b>	220V - 240V~50 - 60HZ
<b>Rated Power</b>	1600-2000W
<b>Protection</b>	Class I



**HADEN**

ESTD. ENGLAND 1958