

# PIFCO®




## INSTRUCTION MANUAL

---

### 1.7L Kettle

Product number: 204622

## Components

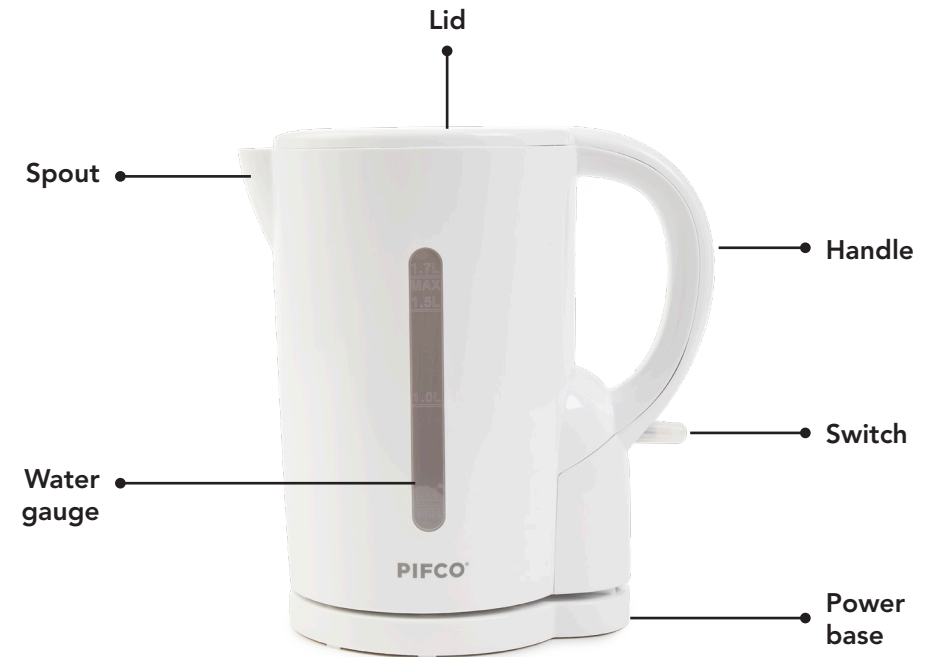


# PIFCO<sup>®</sup>

## How can we help?

The PIFCO team is always interested in what you have to say, so why not get in touch?

 **Call us**  
01909 544 570

 **Email us**  
info@pifco.com

 **Write to us**  
PIFCO Team, Sabichi Homewares Ltd,  
Priorswell Road, Worksop, S80 2BY

 **Website**  
www.pifco.com

### WHAT'S IN THE BOX

- Kettle
- Instruction manual

# PIFCO<sup>®</sup>

# Safety instructions

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful of refilling when the kettle is hot.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch the hot surface. Instead use the handle.
- The attached base can not be used for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let children play with it.
- The kettle is for household use only. Do not use outdoors.
- The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for other than intended use.
- The kettle can only use with the stand provided.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
- The appliance must not be immersed.
- If the kettle is overfilled, boiling water may be ejected.
- The appliance is only to be used with the stand provided.
- CAUTION: Ensure that the appliance is switched off before removing it from its stand.
- Warning: Avoid spillage on the connector.
- Warning: Potential injury from misuse.
- The heating element surface is subject to residual heat after use.

Save these instructions.

---

## First use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

## Instructions for use

1. To fill water into the kettle, remove it from the power base and open the lid by lifting the lid handle, fill with the desired amount of water to the kettle. Always fill the kettle between the minimum (0.5L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Close the lid. Position the kettle on the power base. Make sure the kettle contact is on the power base completely.
3. Connect the plug into a power outlet. Press down the switch to "I" position and the switch light illuminates. Then start to boil the water. The kettle will switch off automatically once the water has boiled and the switch light extinguishes. You can shut off the power by pressing the switch at any moment during boiling water.

**NOTE:** Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.

4. Lift the kettle from the power base and then pour the water.

**NOTE:** Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

5. The kettle will not re-boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the power base when not in use.

**NOTE:** Ensure power supply is turned off when kettle is not in use.

## Dry Boil Protection

Should you accidentally allow the kettle to operate without water, the dry boil protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

## Cleaning & Storage

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in water, or allow moisture to contact with these parts.

### Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolour. To remove this build-up, use non-toxic Liquid De-scaler.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder of water and allow to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

### Cleaning external housing

Wipe the external housing with a damp cloth or cleaner.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

### Cleaning the filter

Remember to clean the filter with a damp cloth at intervals.

### Storage

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

## Technical details

**Product Code:** 204622

**Voltage:** 220-240V 50/60Hz

**Power:** 1850-2200W

**Country of origin:** China



Sabichi Homewares Ltd  
5 Wadsworth Road, Perivale, Middlesex UB6 7JD  
20 Harcourt Street, Dublin D02 H364



### WASTE ELECTRICAL RECYCLING:

This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste.

The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- To recycle waste electrical products using the best available recovery and recycling techniques.
- To minimise the impact to on the environment
  - To treat any hazardous substances
  - To avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact you local authority.

# Warranty

This product is guaranteed for 1 year from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion.

Proof of purchase will be required.

## **This warranty applies only to:**

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

## **This warranty does not cover:**

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed model numbers.

## **PIFCO disclaims any liability for incidental or consequential loss or damages.**

### **In the event of a problem:**

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

### **When contacting PIFCO please provide:**

- Product model number / Product code.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570

Opening Hours: Monday - Friday, 9am - 5pm

Email: [info@pifco.com](mailto:info@pifco.com)

---

**PIFCO®**

**PIFCO®**

---

**PIFCO<sup>®</sup>**

**[www.pifco.com](http://www.pifco.com)**