



***User's
Manual***

Built-In Gas Hob

HG60

To request a service call Tel. 01759 487830



CONTENTS

General warranty conditions

Installation

Operation

Maintenance and cleaning

Attention

- Carefully read the user's manual before use and installation of the appliance.
- Keep the user's manual for future use.
- This appliance is not designed for industrial or laboratory use. Use this appliance only for its intended purpose.
- During use the burners become hot. Care should be taken to avoid touching the burners or pan supports.
- Cleaning: The hob must be switched off before cleaning.
- This appliance must be installed in accordance with British Standards.

THESE INSTRUCTIONS MUST BE FOLLOWED:

Remove all packing materials from the appliance and check for transportation damage.

In case of damage, do not operate the appliance and contact your authorised service provider.

Keep children away from all packaging, which may cause danger.

Prior to installation, ensure that the mains voltage is compatible with the appliance.

This appliance must not be used to heat a room.

This appliance must be installed and connected in accordance with current installation regulations.

Particular attention should be given to the relevant requirements regarding ventilation.

The use of cooking appliances results in the production of heat and moisture in the room in which it is installed. Ensure that the kitchen is well ventilated: keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood).

To request a service call Tel. 01759 487830

To request a service call Tel. 01759 487830

Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or increasing the level of mechanical ventilation where present.

This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless it is under supervision or having been given instructions concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the power cable needs to be replaced, the replacement must be made ONLY by, an authorised service person.

Installation work must be performed in accordance with national wiring standards, by authorised service personnel ONLY.

INSTALLATION

This appliance must be installed by a suitably qualified gas safe registered gas installer to standard BS 6172: 2010

! Failure to do this

will invalidate your warranty

The electrical cable should not touch the hot parts of the appliance.

The electrical cable should not be routed through any area that may be affected by heat from an oven for example, especially the area directly behind an oven.

This appliance must be installed in full accordance with national standards and regulations, please refer to national and local instructions.

This appliance must be installed on a level surface to prevent spillage.

 
Install the appliance away from inflammable materials.

ATTENTION!


The hob's valves are equipped with an automatic ignition mechanism.

Hence, there is no separate ignition button on the control panel.

To ignite the burners; slightly depress the valve knob of desired burner and then turn the knob to the direction of ignition sign "⚡". Once the burner ignites, you can then adjust to the desired flame level. During this operation, ensure that the room is well ventilated.

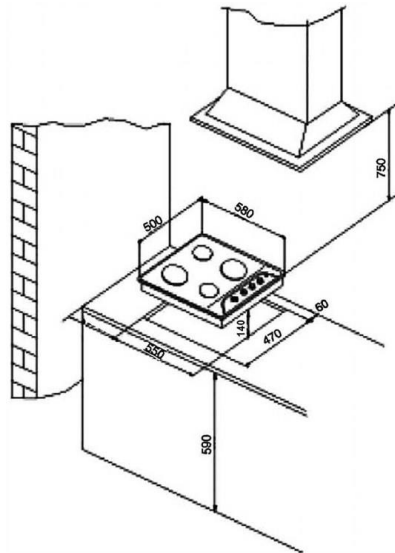

INSTALLATION CONTROL PANEL

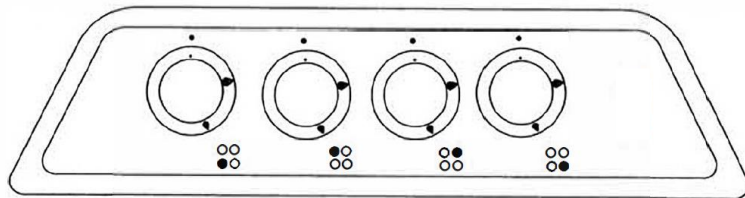 

To request a service call Tel. 01759 487830

- Any parts which are fitted to the product which are not original manufacturer's parts
- Operation at incorrect voltage.
- No Fault Found.
- Scratches and chips to ceramic hob glass surface resulting in the use of inappropriate cooking utensils.
- Noise, vibration or steam resulting in the operation of the appliance. This includes steam from washer, dryer, dishwasher and ovens, running of oven fans, drain pumps.
- Being used in a non-domestic environment, second hand, or those used by several people in communal areas. A service charge could be made if a fault is not a mechanical or electrical manufacturing fault.

Disclaimer

- The manufacturer will not be held responsible for any damages resulting from inappropriate usage of the appliance.
- The Guarantee is valid in the United Kingdom and the Republic of Ireland only.
- The Guarantee is non-transferable and only relates to the original purchaser of this appliance.
- Where deemed necessary by Haden for an appliance to be exchanged within the guarantee period, the new appliance will be covered by the original guarantee period and will not be subject to a new guarantee.
- Haden reserve the right to inspect the appliance before exchange/replacement can take place.
- Haden disclaims any liability for consequential loss or damage.
- This Guarantee does not in any way diminish your statutory or legal rights.

Manufacturer

HADEN
Sabichi Homewares Limited
Sabichi House
5 Wandsworth Road,
Perivale,
Middlesex
UB6 7JD

Service Hotline: 01759 487830
Email: admin@hadenwarranty.co.uk

To request a service call Tel. 01759 487830

Product Guarantee information:

Your Haden product is covered by Guarantee for 24 months from the date of the original purchase. Please ensure you register your product and keep your receipt (proof of purchase) and serial number in a safe place. You can register your Haden product **by calling 01759 487830**

What is covered?

- Electrical and mechanical faults deriving from faulty materials defective components or a manufacturing defect.
 - Replacement functional parts.
 - Labour costs of an approved Haden engineer.
- Your Haden Guarantee covers domestic use at residential addresses and is subject to the following conditions.

Guarantee exclusions:

- Transit / delivery damage or cold weather damage.
- Incorrect installation:
Please ensure that your Haden appliance has been correctly and safely connected to mains supplied electricity, gas and water and drainage as appropriate and in accordance with the instruction manual. Gas appliances must be properly installed by a qualified Gas Safe (or BORD GAIS) installer. LPG conversions will be covered only if a copy of the necessary certification is provided at the time of registration by a qualified Gas Safe (or BORD GAIS) installer. We recommend that all electric cooking products, washing machines and dishwashers are installed by a qualified plumber / electrical appliance installer.
- Repair of, or interference with, the product by any person not authorised by the manufacturer to carry out service.
- Improper use or abuse.
- Accidental damage.
- Reversal of door or door handles on cooling appliances.
- Repair or replacement of any cosmetic or consumable parts such as bulbs, plugs, fuses, cables, filters and attachments, control knobs, flaps, container lids, handles, glass and wire shelves, rubber hoses, plastic door shelves and any accessories for example Oven baking trays and shelves. These include any parts which have become worn, discoloured or damaged, including damage by incorrect use or cleaning.
- Repair of the appliance due to the effects of a lack of cleaning such as dirt, mould, grease, spillages and odours or due to the effects of limescale.
- Any blockages to pump or filter in washing machines and dish washers.
- Punctured evaporators and lack of cleaning (e.g.. blocked gas jets)

To request a service call Tel. 01759 487830

OPERATION OF THE GAS HOBS

Since the knobs controlling the gas cookers are provided with special safety devices, it is necessary to turn the knobs by slightly pressing in to enable the flow of gas.

 
 
- The corresponding burners are indicated on the control panel, The flame positions are shown on the gas control knobs.
- Manual lighting of the burners: hold a match near to the burner then, slightly depress the desired burner's control knob and turn it anticlockwise to the maximum position.
- To turn off the hob, bring the knob to its original position and ensure that the flame goes out.
- For normal ignition:

Press the chosen gas control knob in, the ignition will spark. (all the spark plugs will operate at the same time) then turn the knob to the ignition position. If ignition is not achieved, wait for the gas to disperse then try again.

BEFORE PRESSING THE IGNITION BUTTON, BE SURE THAT ALL THE BURNERS ARE TURNED OFF.

OPERATION OF THE GAS BURNERS

- The burners are different diameters.
- In order to obtain maximum efficiency and cooking economy, choose a convenient burner for the size of your cooking pans and adjust the minimum flame position upon reaching the boiling point. Preferably, place a lid on +the pan. Before observing the flame, do not place your cooking pan over the burners. We do advise to use the cooking pans with the sizes:
 - 24-28 cm on the large burner,
 - 18-24 cm on the medium burner,
 - 12-18 cm on the small burner.

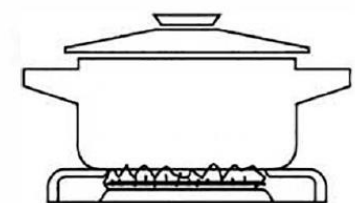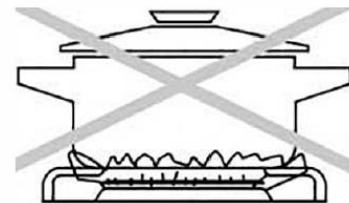

To request a service call Tel. 01759 487830

Maintenance and cleaning

- Disconnect the appliance from the mains power before maintenance and cleaning.
- Please wait until the appliance completely cools down.
- The hob must only be cleaned with a damp cloth or sponge.
- Never use abrasive powder.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the hob, as they can scratch the surface.
- Steam cleaners must not be used for cleaning or any other purpose.
- Enamelled parts can be cleaned with soapy water and a soft clean cloth.
- In order to prevent damage do not scrape dirt off the control panel with sharp tools that may scratch and cause damage.

To extend the life of your appliance, keep your hob clean and dry.
Any spillage should be removed from the hob surface once the hob has cooled down

Pay particular attention to not pour water on the appliance during operation, and always avoid contact with acid or alkaline containing substances, such as vinegar, lemon, juice, salt etc. if this occurs, wipe and clean immediately paying attention to the hot parts of the appliance

To request a service call Tel. 01759 487830

GENERAL WARRANTY CONDITIONS:

This appliance is under warranty covering only the replacement of the defective parts and free of charge repair during the period of the warranty. Please keep your receipt to present to our Authorised Service Provider before a repair can be booked.

The connection and installation of the appliance can only be carried out by authorised service personnel.

This appliance must be grounded.

Problems arising due to improper installation are not covered by the warranty. Unauthorised repair or modification of the appliance invalidates the warranty.

Information concerning disposal

Disposal of packaging

The packaging protects your appliance from damage during transit. All utilised materials are environmentally safe and recyclable. Please help us by disposing of the packaging in an environmentally friendly manner. Please ask your dealer or enquire at your local authority about current means of disposal.



Disposal of your old appliance

Old appliances are not worthless rubbish! Valuable raw materials can be reclaimed by recycling old appliances.

This appliance is identified according to the European guideline 2012/19/EU on waste electrical and electronic equipment-WEEE. The directive specifies the framework for an EU-wide valid return and re-use of old appliances.

Compliant with WEEE Regulations.

To request a service call Tel. 01759 487830